


SERVICE MANUAL

INTEGRATED AMPLIFIER

SANSUI AU-D33/D22

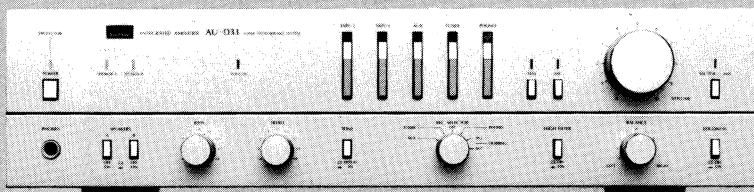

• SPECIFICATIONS

<AU-D33>

Power output

MIN. RMS, both channels driven, from 20 to 20,000 Hz with
no more than 0.004 % total harmonic distortion
50 watts per channel into 8 ohms

Load impedance 8 ohms

Total harmonic distortion

. less than 0.004 % at or below
rated min. RMS power output

Intermodulation distortion (60 Hz : 7 kHz = 4:1 SMPTE
method) less than 0.006 % at rated

Frequency response (at 1 watt)

Overall (from AUX) . DC to 300,000 Hz +0 dB, -3.0 dB

RIAA curve deviation (PHONO-MM, 20 Hz to 100 kHz)

. +0.2 dB, -0.5 dB (REC OUT)

Damping factor (1 kHz, both channels driven)

. 40 into 8 ohms

Input sensitivity and impedance (at 1 kHz)

PHONO-MC 250 μ V/100 ohms

(Max. input capability: 12 mV at 1 kHz, less than 0.1 %
total harmonic distortion)

PHONO-MM 2.5 mV/47 kilohms

(Max. input capability: 170 mV at 1 kHz, less than
0.01 % total harmonic distortion)

AUX, TUNER, TAPE PLAY-1, 2

. 200 mV/47 kilohms

Output level (1,000 Hz)

TAPE REC-1, 2 200 mV into 47 kilohms

Channel separation (1 kHz, at rated power output)

PHONO-MM 72 dB

AUX, TUNER, TAPE PLAY-1, 2

. 90 dB

Signal to noise ratio (short-circuit, A-network)

PHONO-MC 65 dB

PHONO-MM 84 dB

AUX, TUNER, TAPE PLAY-1, 2

. 105 dB

Controls

BASS ± 10 dB at 50 Hz

TREBLE ± 10 dB at 10 kHz

LOUDNESS +8 dB at 100 Hz

+5 dB at 10 kHz

Others

Power voltage 100/120/220/240 V (50/60 Hz)

For U.S.A. and Canada

. 120 V (60 Hz)

Power consumption . . . 210 watts 240 VA Rated

300 watts Maximum

Dimensions 430 mm (16-15/16") W

112 mm (4-7/16") H

334 mm (13-3/16") D

Weight 7.3 kg (16.1 lbs.) net

8.3 kg (18.3 lbs.) packed

to be continued ►

Sansui

SANSUI ELECTRIC CO., LTD.

<AU-D22>

Power output

MIN. RMS, both channels driven, from 20 to 20,000 Hz with no more than 0.006 % total harmonic distortion

35 watts per channel into 8 ohms

Load impedance 8 ohms

Total harmonic distortion

. less than 0.006 % at or below

rated min. RMS power output

Intermodulation distortion (60 Hz : 7 kHz = 4:1 SMPTE method) less than 0.007 % at rated

Frequency response (at 1 watt)

Overall (from AUX) . 20 to 300,000 Hz +0 dB, -3.0 dB

RIAA curve deviation (PHONO-MM, 20 Hz to 100 kHz)

. +0.2 dB, -0.5 dB (REC OUT)

Damping factor (1 kHz, both channels driven)

. 40 into 8 ohms

Input sensitivity and impedance (at 1 kHz)

PHONO-MC 250 μ V/100 ohms

(Max. input capability: 12 mV at 1 kHz, less than 0.1 % total harmonic distortion)

PHONO-MM 2.5 mV/47 kilohms

(Max. input capability: 170 mV at 1 kHz, less than 0.01 % total harmonic distortion)

AUX, TUNER, TAPE PLAY-1, 2

. 200 mV/47 kilohms

Output level (1,000 Hz)

TAPE REC-1, 2 200 mV into 47 kilohms

Channel separation (1 kHz, at rated power output)

PHONO-MM 60 dB

AUX, TUNER, TAPE PLAY-1, 2

. 90 dB

Signal to noise ratio (short-circuit, A-network)

PHONO-MC 65 dB

PHONO-MM 84 dB

AUX, TUNER, TAPE PLAY-1, 2

. 105 dB

Controls

BASS \pm 10 dB at 50 Hz

TREBLE \pm 10 dB at 10 kHz

LOUDNESS +8 dB at 100 Hz

+5 dB at 10 kHz

Others

Power voltage 100/120/220/240 V (50/60 Hz)

For U.S.A. and Canada

. 120 V (60 Hz)

Power consumption . . . 160 watts 190 VA Rated

270 watts Maximum

Dimensions 430 mm (16-15/16") W

112 mm (4-7/16") H


334 mm (13-3/16") D

Weight 6.8 kg (15.0 lbs.) net

7.8 kg (17.2 lbs.) packed

* Design and specifications subject to change without notice for improvements.

1. BLOCK DIAGRAM

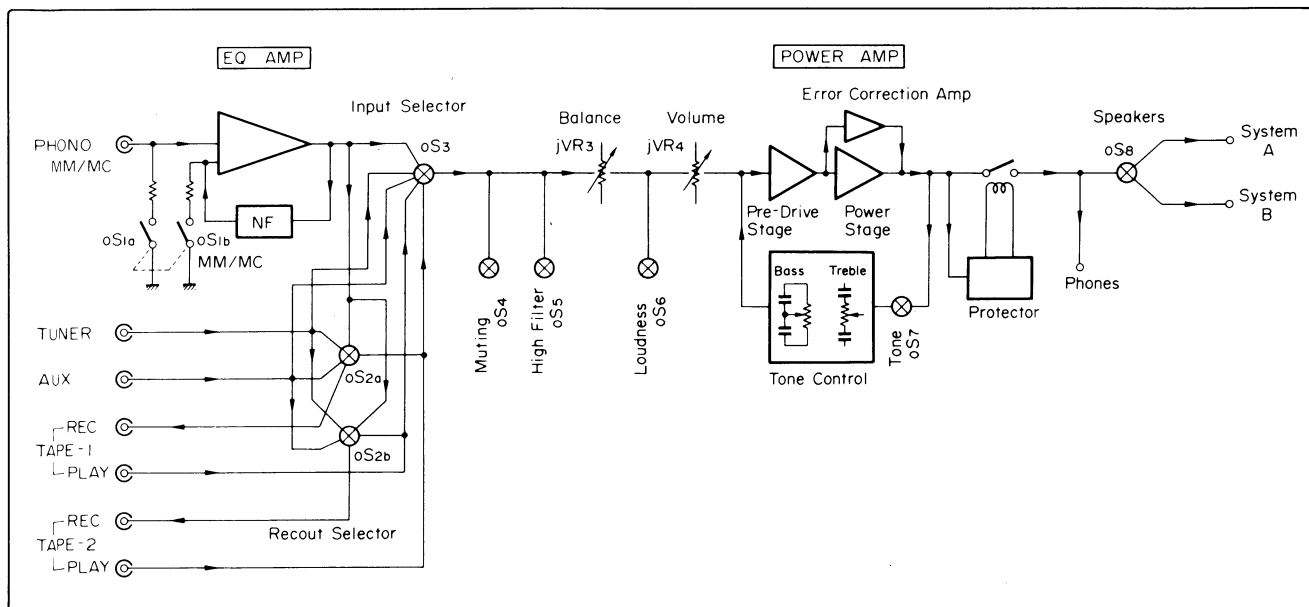


2. PARTS LOCATION & PARTS LIST

•Since some of capacitors and resistors are omitted from parts lists in this Service Manual, refer to the Common Parts List for capacitors & resistors, which was appended previously to Sansui Manual.

2-1. F-3578 Equalizer Amp Circuit Board (Stock No. 00655401 = AU-D33/00662401 = AU-D22)

Component Side

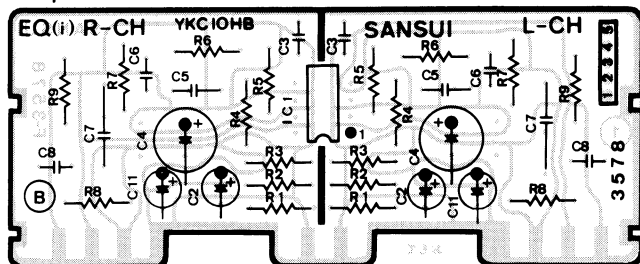


Parts List

Parts No.	Stock No.	Description
•IC iIC1	46151400	NJM2043D

2-2. F-3592 Power Supply, Protector Circuit Board (Stock No. 00657101 = AU-D33/00671701 = AU-D22)

Component Side

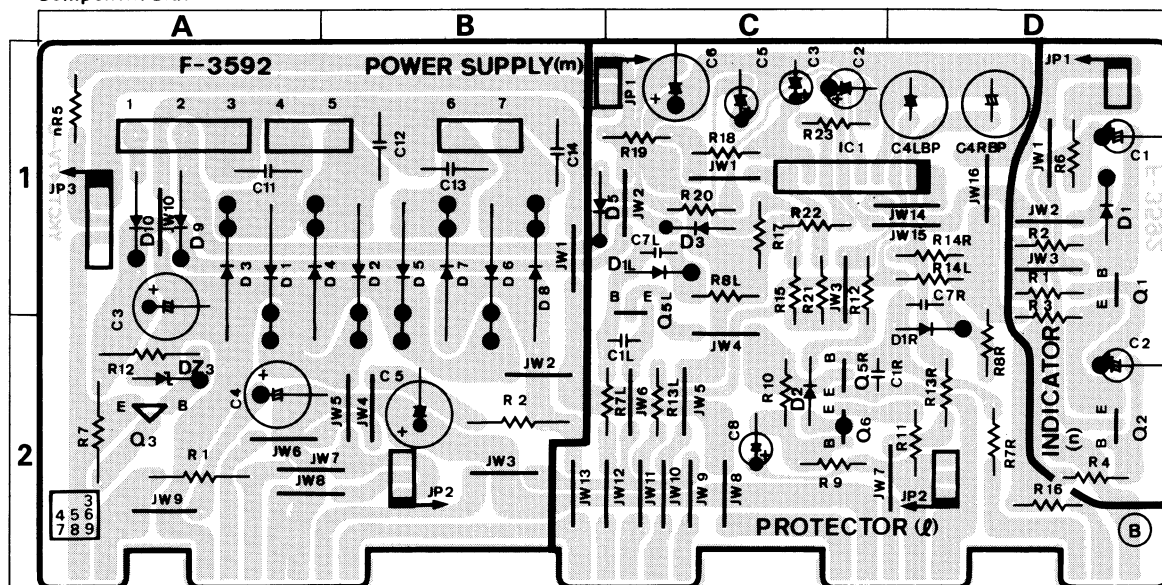


Parts List

Parts No.	Stock No.	Description
•IC iIC1	46207600	TA7317P
•Diode ID1 ~ 3	03117600	1S2473
ID5	03117600	1S2473
IC4	08460200	220μF 6.3V E.B.
•Transistor mQ3	03083902	2SD313
•Diode mD9, 10	03117700	10E-2
•Zener Diode mDZ3	03178800	RD12E-B
mR7	00184900	82Ω 1W N.I.R.
mC11 ~ 14	08680400	0.01μF 500V C.C.
•Transistor nQ1	03068301 or 03059501	2SC2320 2SC945
nQ2	03068301 or 03059501	2SC2320 2SC945

Parts No.	Stock No.	Description
•Diode nD1	03117600	1S2473
<AU-D33>		
•Transistor IQ5	03065501 or 03067401	2SC1775 2SC1845
IQ6	03009301 or 03010901	2SA872 2SA992
•Diode mD1 ~ 8	03115300	30D-2
<AU-D22>		
•Transistor IQ5	03067401	2SC1845
IQ6	03010901	2SA992
•Diode mD1 ~ 8	03117700	10E-2


2-3. F-3590 Power Amp Circuit Board (Stock No. 00656901 = AU-D33)

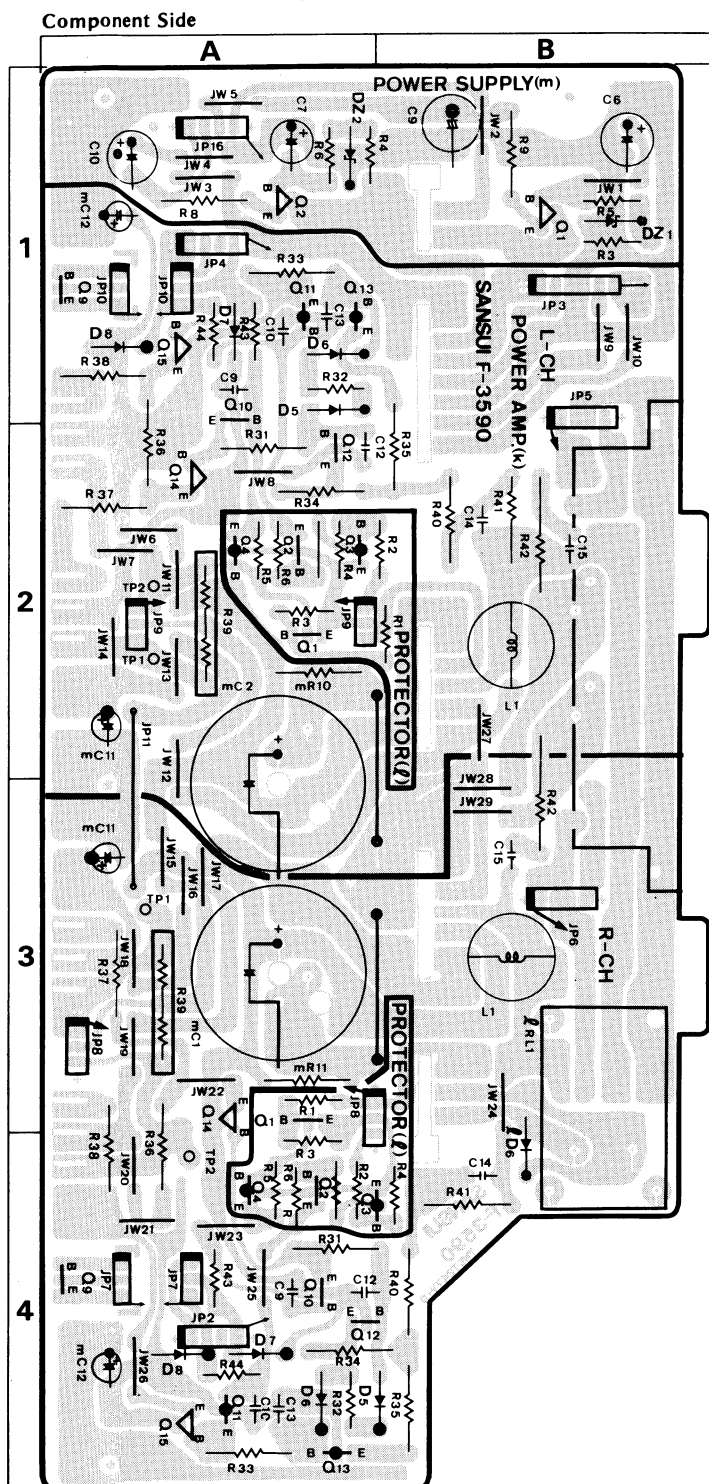

Parts List

Parts No.	Stock No.	Description
•Transistor		
kQ9	03068301	2SC2320
	or 03059501	2SC945
kQ10	03085201	2SD438
kQ11	03033601	2SB560MP
kQ12	07263501	2SD600
kQ13	07263401	2SB631
kQ14	03086101	2SD357
kQ15	03034401	2SB527
kQ16	46169901	2SC2579LBR
kQ17	46169801	2SA1104LBR
•Diode		
kD5	03117600	1S2473
kD6	03117600	1S2473
kR39	46184100	0.22Ω x 2 5W Ce.R.
kR42	00190600	4.7Ω 2W N.I.R.
kL1	46027200	1μH Inductor
•Transistor		
IQ1	03068301	2SC2320
	or 03059501	2SC945
	or 07194801	2SC1815
IQ2	03068301	2SC2320
	or 03059501	2SC945
	or 07194801	2SC1815
IQ3	03012701	2SA999
	or 07197001	2SA733A
	or 07194701	2SA1015
IQ4	03012701	2SA999
	or 07197001	2SA733A
	or 07194701	2SA1015
•Diode		
ID4	03117700	10E-2
IRL1	46152000	Relay
•Transistor		
mQ1	03085201	2SD438
mQ2	03033601	2SB560MP
•Zener Diode		
mDZ1	03180000	RD22E
mDZ2	03180000	RD22E
mC1	46151600	8200μF 50V E.C.
mC2	46151600	8200μF 50V E.C.
	46094600	8P Output Terminal

2-4. F-3589 Pre Drive Amp Circuit Board (Stock No. 00656801 = AU-D33)

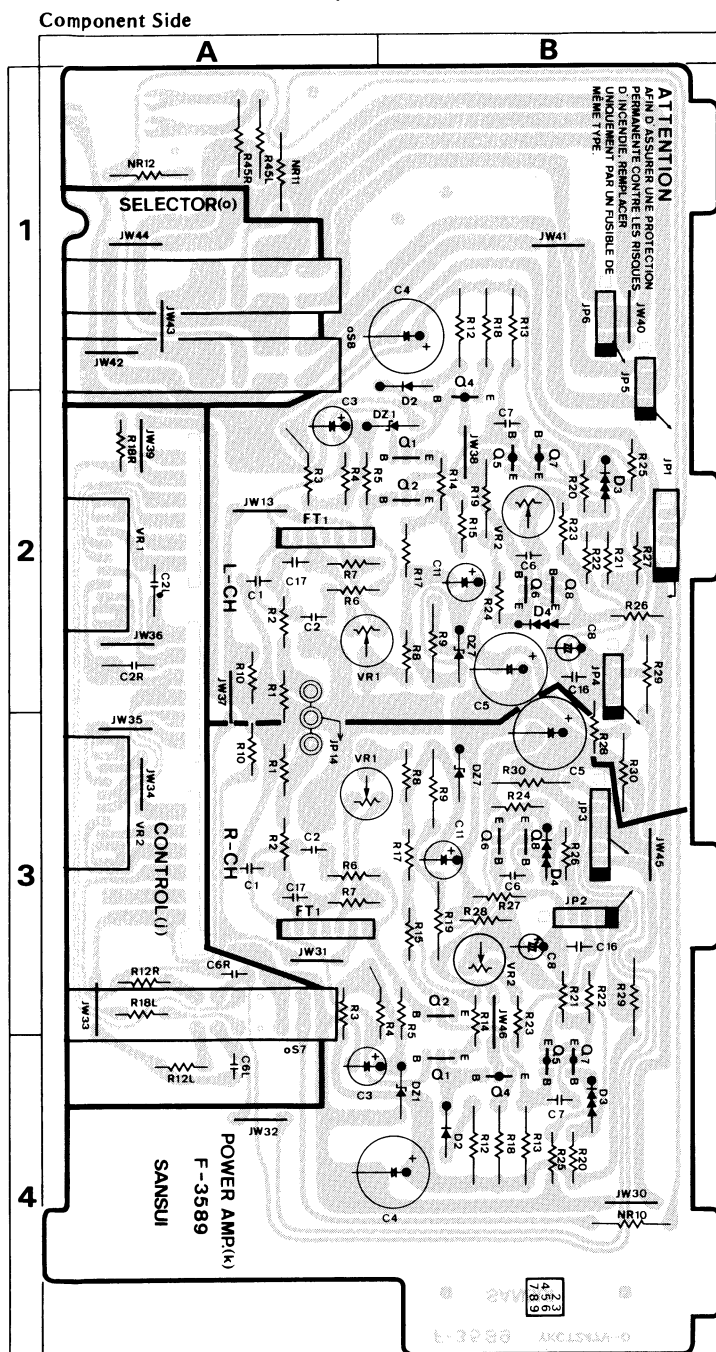

Parts List


Parts No.	Stock No.	Description
● Transistor		
kQ1	03067401	2SC1845
	or 07299101	2SC2240
kQ2	03067401	2SC1845
	or 07299101	2SC2240
kQ4	03010901	2SA992
	or 07299001	2SA970
kQ5	03010901	2SA992
	or 07299001	2SA970
kQ6	03067401	2SC1845
	or 07299101	2SC2240
kQ7	03007901	2SA899
kQ8	03064001	2SC1904
● FET		
kFT1	07110001	μPA68H
● Diode		
kD2	03117600	1S2473
● Varistor		
kD3	03401700	MV-103
kD4	03401700	MV-103
● Zener Diode		
kDZ1	03179600	RD18E-B
kDZ7	03180000	RD22E
kR45	00181200	220Ω 1W N.I.R.
kVR1	10350100	Semi Variable Resistor 100Ω (B), DC 0V
kVR2	10350700	Semi Variable Resistor 1kΩ (B), bias
oS7	46162100	Push Switch, tone selector
oS8	46161800	Push Switch, speaker A/B
oJ1	07204100	Head Phone Jack (Silver Model)
	46096600	Head Phone Jack (Black Model)
jVR1	46159800	Variable Resistor 50kΩ (C) x 2, bass
jVR2	46159800	Variable Resistor 50kΩ (C) x 2, treble

● Abbreviations

C.R.	Carbon Resistor	E.L.	Low Leak Electrolytic Capacitor
S.R.	Solid Resistor	E.B.	Bi-Polar Electrolytic Capacitor
Ce.R.	Cement Resistor	E.BL.	Low Leak Bi-Polar Electrolytic Capacitor
M.R.	Metal Film Resistor	Ta.C.	Tantalum Capacitor
F.R.	Fusing Resistor	F.C.	Film Capacitor
N.I.R.	Non-Inflammable Resistor	M.P.	Metalized Paper Capacitor
C.C.	Ceramic Capacitor	P.C.	Polystyrene Capacitor
C.T.	Ceramic Capacitor, Temperature Compensation	G.C.	Gimmic Capacitor
E.C.	Electrolytic Capacitor		

2-5. F-3594 Power Amp Circuit Board (Stock No. 00662601 = AU-D22)


Component Side

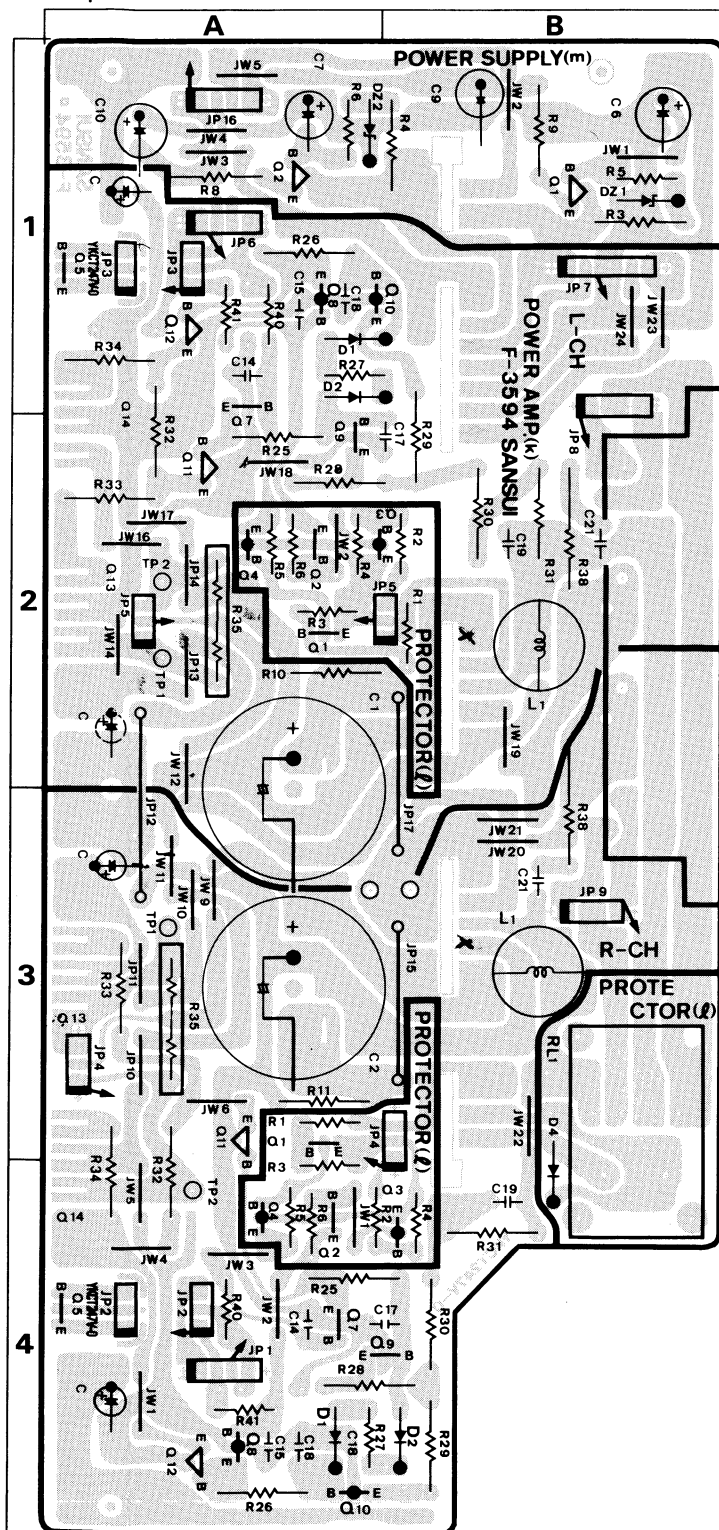

Parts List

Parts No.	Stock No.	Description
●Transistor		
kQ5	03068301	2SC2320
	or 07194801	2SC1815
	or 03059501	2SC945
kQ7	03062801	2SC1735
kQ8	03007201	2SA850
kQ9	07263501	2SD600
kQ10	07263401	2SB631
kQ11	03086101	2SD357
kQ12	03034401	2SB527
kQ13	46117901	2SC2577LBR
kQ14	46117801	2SA1102LBR
●Diode		
kD1, 2	03117600	1S2473
kR35	46184300	0.22Ω x 2 3W Ce.R.
kR38	00185500	10Ω 2W N.I.R.
kL1	46027200	Peaking Coil 1μH
●Transistor		
IQ1	03068301	2SC2320
	or 03059501	2SC945
	or 07194801	2SC1815
IQ2	03068301	2SC2320
	or 03059501	2SC945
	or 07194801	2SC1815
IQ3	03012701	2SA999
	or 07197001	2SA733A
	or 07194701	2SA1015
IQ4	03012701	2SA999
	or 07197001	2SA733A
	or 07194701	2SA1015
●Diode		
ID4	03117700	10E-2
IRL1	46152000	Relay
●Transistor		
mQ1	03085201	2SD438
mQ2	03033601	2SB560MP
●Zener Diode		
mDZ1, 2	03180000	RD22E-B
mC1, 2	00316100	6800μF 50V E.L.
	46094600	8P Output Terminal

2-6. F-3593 Pre Drive Amp Circuit Board (Stock No. 00662501 = AU-D22)

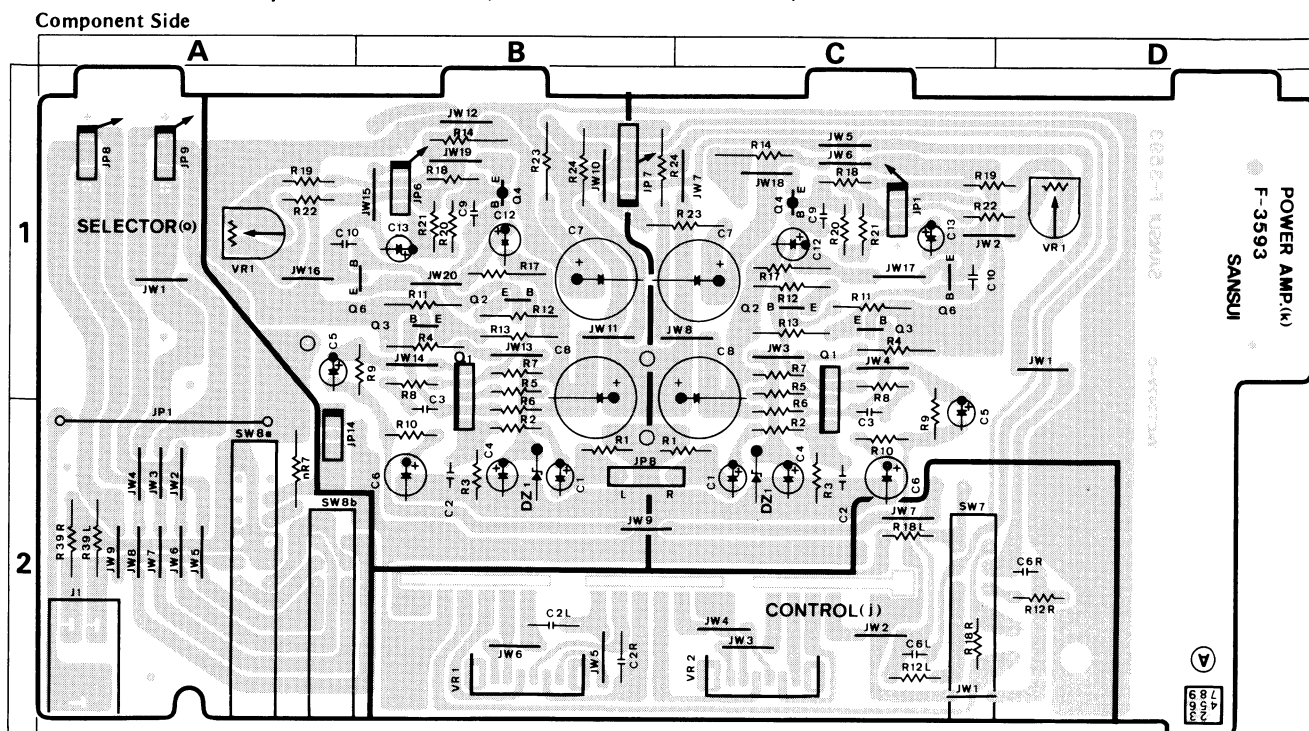

Parts List


Parts No.	Stock No.	Description
jVR1	46159800	Variable Resistor 50kΩ (C) x 2, bass
jVR2	46159800	Variable Resistor 50kΩ (C) x 2, treble
● Transistor		
kQ1	03602901	2SA798
kQ2	03062801	2SC1735
	or 46127901	2SC2910
kQ3	03062801	2SC1735
	or 46127901	2SC2910
kQ4	03007901	2SA899
kQ6	03064001	2SC1904

Parts No.	Stock No.	Description
● Zener Diode		
kDZ1	03179000	RD13E-B
kVR1	07240900	Semi Variable Resistor 500Ω (B), bias
oS7	11319501	Push Switch, tone
oS8	46162000	Push Switch, speaker A/B
oJ1	07204100	Head Phone Jack (Silver Model)
	46096600	Head Phone Jack (Black Model)

● Note: The circuit board, F-3580, F-3581, F-3583, F-3582, F-3591, F-3584, F-3334, F-3585, F-3579, F-3586 & F-3587 are not supplied as the assembled. However, the individual parts on the circuit board are provided by orders.

2-7. F-3580 Master Volume Circuit Board

Component Side

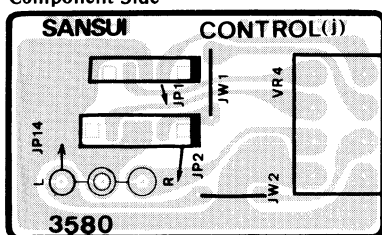


Parts List

Parts No.	Stock No.	Description
jVR4	46159900	Variable Resistor 150kΩ (B) x 2

2-8. F-3581 Input Terminal Circuit Board

Component Side

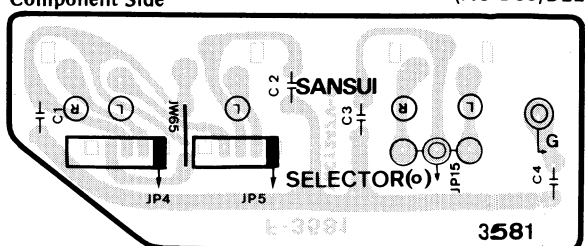

Parts List

Parts No.	Stock No.	Description
	07249000	2P Input Terminal, phono
	07249100	4P Input Terminal, tuner, aux

7



Parts No

Parts No.	Stock No.	Description
<AU-D33> oS1	46162300	Push Switch, MM/MC
<AU-D22> oS1	46162400	Push Switch, MM/MC

Parts No.	Stock No.	Description
<AU-D33> oS1	46162300	Push Switch, MM/MC
<AU-D22> oS1	46162400	Push Switch, MM/MC

2-10. F-3582 Recording Selector Circuit Board (AU-D33/D22)

14

**Parts No.**

Component Side

SANSUI **INDICATOR (n)** JP14

LD1 LD11 LD12 LD13

3591

LD0

SANSUI **INDICATOR (n)** JP 14

Parts No.	Stock No.	Description
nLD1	46169300	Light Emitting Diode SEL-1210S
nLD12	46169300	Light Emitting Diode SEL-1210S
<AU-D33>		
nLD10	46174000	Light Emitting Diode SLP-470C
nLD11	46169300	Light Emitting Diode SEL-1210S

Component Side

A

3584

JP3
JW64

JP4
JW4

JP5
JW5

JP6
JW6

VR3

R15R
C7R
C8R
R16R
C8R
R17R
C9R
C9L
C8L
C9L

OS5

COTROL (i) SANSUI

R17L

3584

COTROL (j) SANSUI

JP3
JW64
JP4
JW4
JW5
JW6
VR3
JP2
JP1
JW3
JW59
JW64
R15R
C7R
C7L
R16R
C8R
C8L
R17R
C9R
C9L
R17L

Parts No.	Stock No.	Description
jVR3	46097500	Variable Resistor 250k Ω (MN) x 2
oS5	11319501	Push Switch, high filter
oS6	11319501	Push Switch, loudness

[illegible]

SANSUI CONTROL 3334

Diagram A shows the internal wiring of the SANSUI CONTROL 3334. The circuit includes various electronic components labeled with alphanumeric codes: resistors (R1 through R11), capacitors (C1 through C12), and integrated circuits (IC1, IC2, IC3, IC4, IC5, IC6, IC7, IC8, IC9, IC10, IC11, IC12, IC13, IC14, IC15, IC16, IC17, IC18, IC19, IC20, IC21, IC22, IC23, IC24, IC25, IC26, IC27, IC28, IC29, IC30, IC31, IC32, IC33, IC34, IC35, IC36, IC37, IC38, IC39, IC40, IC41, IC42, IC43, IC44, IC45, IC46, IC47, IC48, IC49, IC50, IC51, IC52, IC53, IC54, IC55, IC56, IC57, IC58, IC59, IC60, IC61, IC62, IC63, IC64, IC65, IC66, IC67, IC68, IC69, IC70, IC71, IC72, IC73, IC74, IC75, IC76, IC77, IC78, IC79, IC80, IC81, IC82, IC83, IC84, IC85, IC86, IC87, IC88, IC89, IC90, IC91, IC92, IC93, IC94, IC95, IC96, IC97, IC98, IC99, IC100). The diagram also shows the connection points for the control panel, including the 12V and 5V power rails, and the ground connection. The components are arranged in a grid-like pattern, with the control panel components on the left and the power supply components on the right. The diagram is labeled with 'SANSUI CONTROL 3334' at the top and 'Diagram A' in a circle at the bottom right.

INDICATOR(n)

(A)

LD8 JP13 LD7 LD6 JP12 LD5 LD4

3585

INDICATOR(n)

(A)

LD8 JP13 LD7 LD6 JP12 LD5 LD4

3585

Parts No.	Stock No.	Description
nLD4 ~ 6	46173900	Light Emitting Diode SLP-270C
nLD7,8	46174000	Light Emitting Diode SLP-470C

Component Side

SPARE T M

YELLOW-ORANGE

5 A FUSE AT 100 120V
2.5A FUSE AT 220 240V

PF

BLUE

PURPLE

BLUE-ORANGE-YELLOW

PURPLE-RED-YELLOW

240V 100V
220V 120V

SANSUI
3579

—|—
pC1

pS1

FIXED
PARTS(P)

CAUTION

FOR CONTINUED PROTECTION AGAINST FIRE
HAZARD, REPLACE ONLY
WITH SAME TYPE FUSE

(A)

The diagram shows the rear panel of the Sansui 3579 receiver with the following components and labels:

- SPARE T M**: Label for the spare fuse holder.
- YELLOW-ORANGE**: Label for the top fuse holder.
- BLUE**: Label for the 240V/100V fuse holder.
- PURPLE**: Label for the 230V/120V fuse holder.
- BLUE-ORANGE-YELLOW**: Label for the 240V/120V fuse holder.
- PURPLE-RED-YELLOW**: Label for the 230V/120V fuse holder.
- 5 A FUSE AT 100 120V**: Specification for the top fuse.
- 2.5A FUSE AT 220 240V**: Specification for the bottom fuse.
- SANSUI 3579**: Model name and number.
- PS1**: Label for the power switch.
- FIXED PARTS(P)**: Label for the fixed parts section.
- CAUTION**: Warning label.
- FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH SAME TYPE FUSE**: Safety instruction.
- A**: Label for the antenna terminal.

Parts No.	Stock No.	Description
pC1	08302600	0.01 μ F 400V C.C.
<AU-D33>		
pF1	07188700	Fuse 125V 2.5A
pS1	07224300	Push Switch
<AU-D22>		
pF1	07188500	Fuse 250V 1.5A
pS1	46087300	Push Switch


Parts No.	Stock No.	Description
nLD2	46173900	Light Emitting Diode SLP-270C
nLD3	46169300	Light Emitting Diode SEL-1210S

Parts No.	Stock No.	Description
nLD2	46173900	Light Emitting Diode SLP-270C
nLD3	46169300	Light Emitting Diode SEL-1210S

Parts No.	Stock No.	Description
nLD9	46174000	Light Emitting Diode SLP-470C

Parts No.	Stock No.	Description
nLD9	46174000	Light Emitting Diode SLP-470C

A) AU-D33

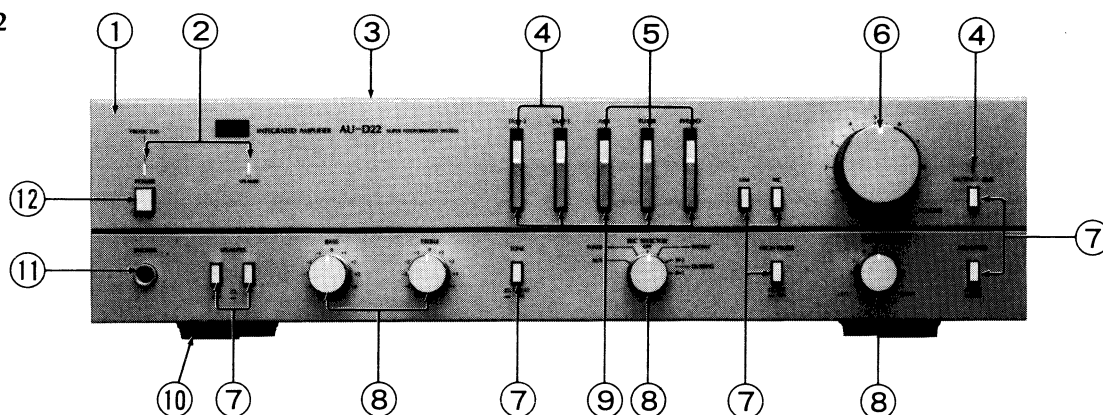

Parts No.	Stock No.	Description
2	46169300	Light Emitting Diode SEL-1210S
4	46174000	Light Emitting Diode SLP-470C
5	46173900	Light Emitting Diode SLP-270C
10	07822700	Leg


1	07814000	Front Panel Ass'y <AU-D33>
	07815800	Front Panel Ass'y <AU-D22>
3	07812000	Bonnet
6	07808900	Knob, volume
7	07809500	Push Knob, accessory
8	07808700	Knob, balance, bass, treble, rec selector
9	07809300	Push Knob, input selector
11	07204100	Head Phone Jack
12	07809700	Push Knob, power

1	07814100	Front Panel Ass'y <AU-D33>
	07815700	Front Panel Ass'y <AU-D22>
3	07812100	Bonnet
6	07809000	Knob, volume
7	07809600	Push Knob, accessory
8	07808800	Knob, balance, bass, treble, rec selector
9	07809400	Push Knob, input selector
11	46096600	Head Phone Jack
12	07809800	Push Knob, power


Parts No.	Stock No.	Description
1	15005001	Power Transformer <AU-D33>
	15005101	Power Transformer <AU-D22>
2	39106000	Strain Relief
3	38004700	Power Supply Cord
4	07189600	AC Outlet
5	46094600	8P Output Terminal
6	22301500	Ground Terminal
7	07249000	2P Input Terminal, phono
8	07249100	4P Input Terminal, tuner, aux, tape
pF1	07188700	Fuse 125V 2A <AU-D33>
	07188500	Fuse 250V 1.5A <AU-D22>

3-2. Top View

A) AU-D33

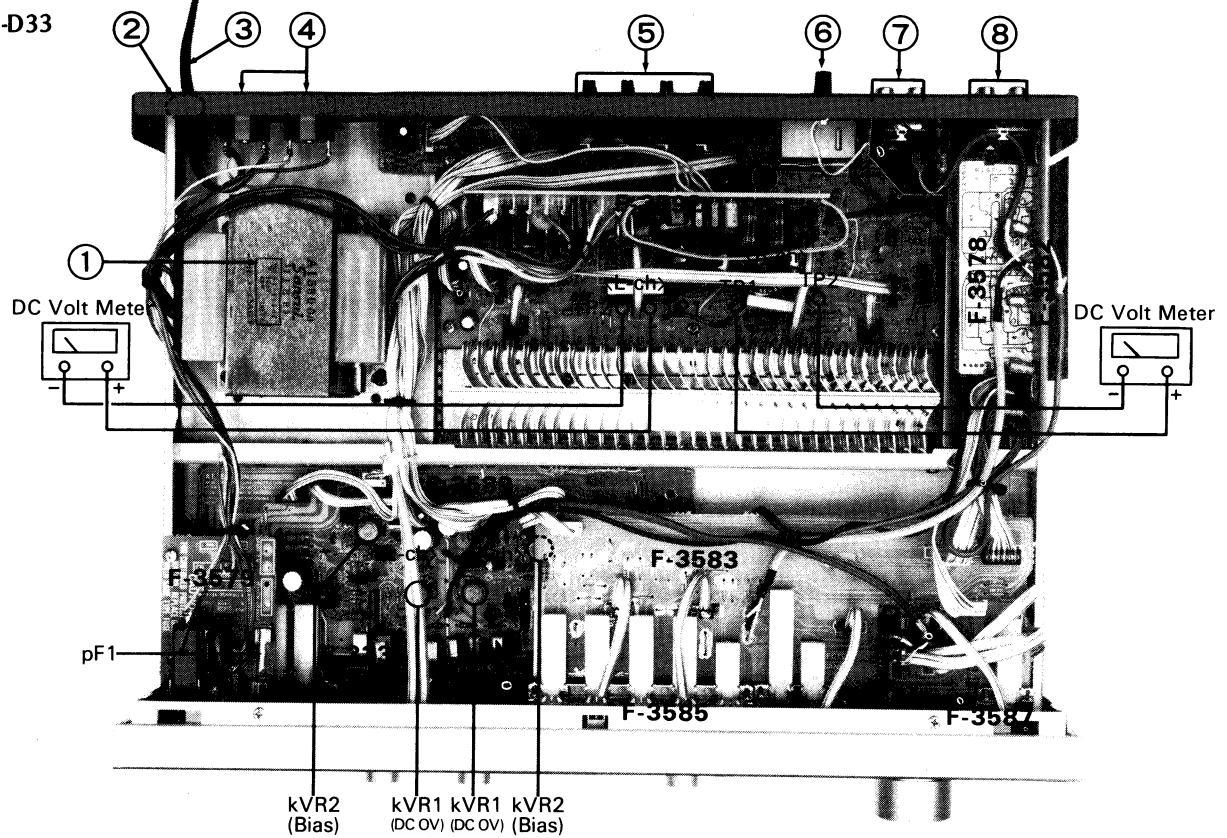

B) AU-D22

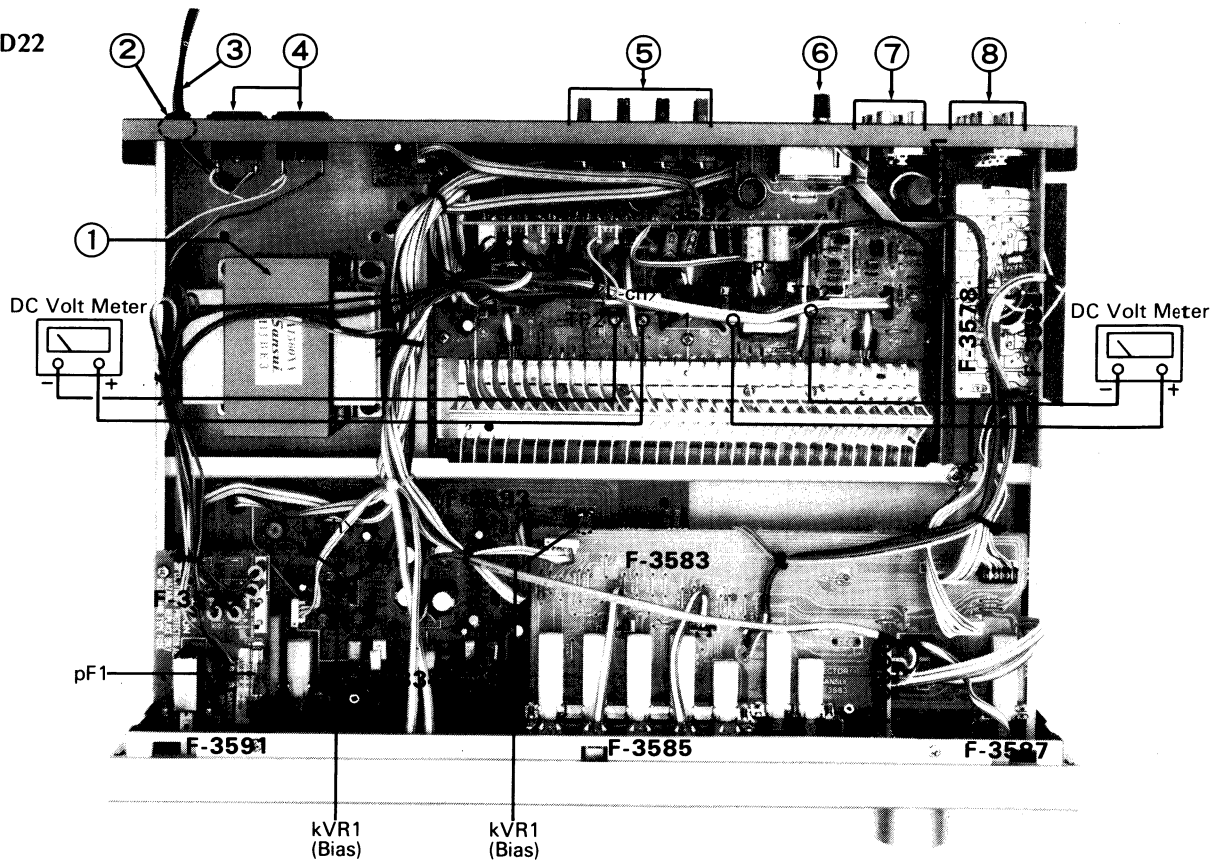

4. ADJUSTMENTS

4-1. Driver Circuit Adjustment (See Top View on page 10)

Note: 1) Master Volume Minimum
2) Room Temperature . 18°C ~ 28°C (65°F ~ 83°F)


A) AU-D33

STEP	SUBJECT	MEASURE OUTPUT	ADJUST	ADJUST FOR	REMARKS
1.	DC 0V Adj. L-CH	Speaker Terminal (L-ch)	kVR1, L-ch (F-3589)	DC 0V \pm 20 mV	Before turning ON power switch, set kVR1 (F-3589) to center position.
2.	DC 0V Adj. R-CH	Speaker Terminal (R-ch)	kVR1, R-ch (F-3589)	DC 0V \pm 20 mV	
3.	Bias Current Adj. L-CH	Between emitters of power transistors (kQ16 & kQ17) (Between TP1 & 2)	kVR2, L-ch (F-3589) at 1 minute after turning the power ON.	DC 4 mV	<ul style="list-style-type: none"> Before adjustment, the temperature of the transistors and the radiator must be same as room temperature. Before turning ON power switch, set kVR2 (F-3589) fully counterclockwise.
4.	Bias Current Adj. R-CH	Between emitters of power transistors (kQ16 & kQ17) (Between TP1 & 2)	kVR2, R-ch (F-3589) at 1 minute after turning the power ON.	DC 4 mV	

B) AU-D22


STEP	SUBJECT	MEASURE OUTPUT	ADJUST	ADJUST FOR	REMARKS
1.	Bias Current Adj. L-CH	Between emitters of power transistors (kQ13 & kQ14) (Between TP1 & 2)	kVR1, L-ch (F-3593)	DC 4 mV	<ul style="list-style-type: none"> Before adjustment, the temperature of the transistors and the radiator must be same as room temperature. Before turning ON power switch, set kVR1 (F-3593) fully counterclockwise.
2.	Bias Current Adj. R-CH	Between emitters of power transistors (kQ13 & kQ14) (Between TP1 & 2)	kVR1, R-ch (F-3593)	DC 4 mV	

5. INTERIOR BLOCK DIAGRAM OF IC, TA7317P


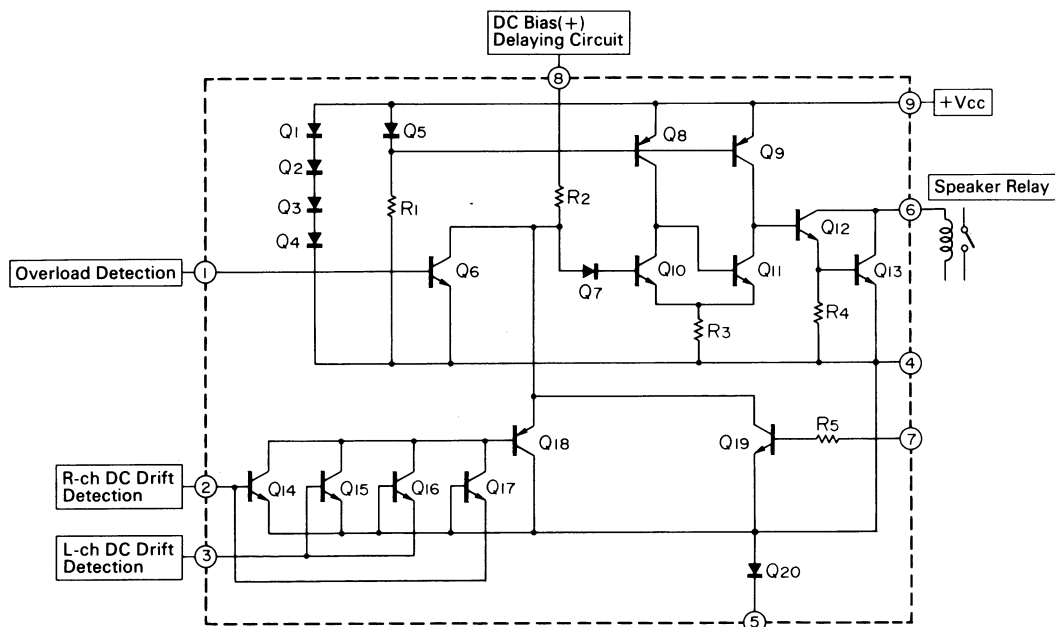


6. SCHEMATIC DIAGRAM 6-1. AU-D33

* Design and specifications subject to change without notice for improvement.
 * La présentation et les spécifications sont susceptibles d'être modifiées sans préavis par suites d'améliorations éventuelles.
 * Änderungen, die dem technischen Fortschritt dienen, bleiben vorbehalten.

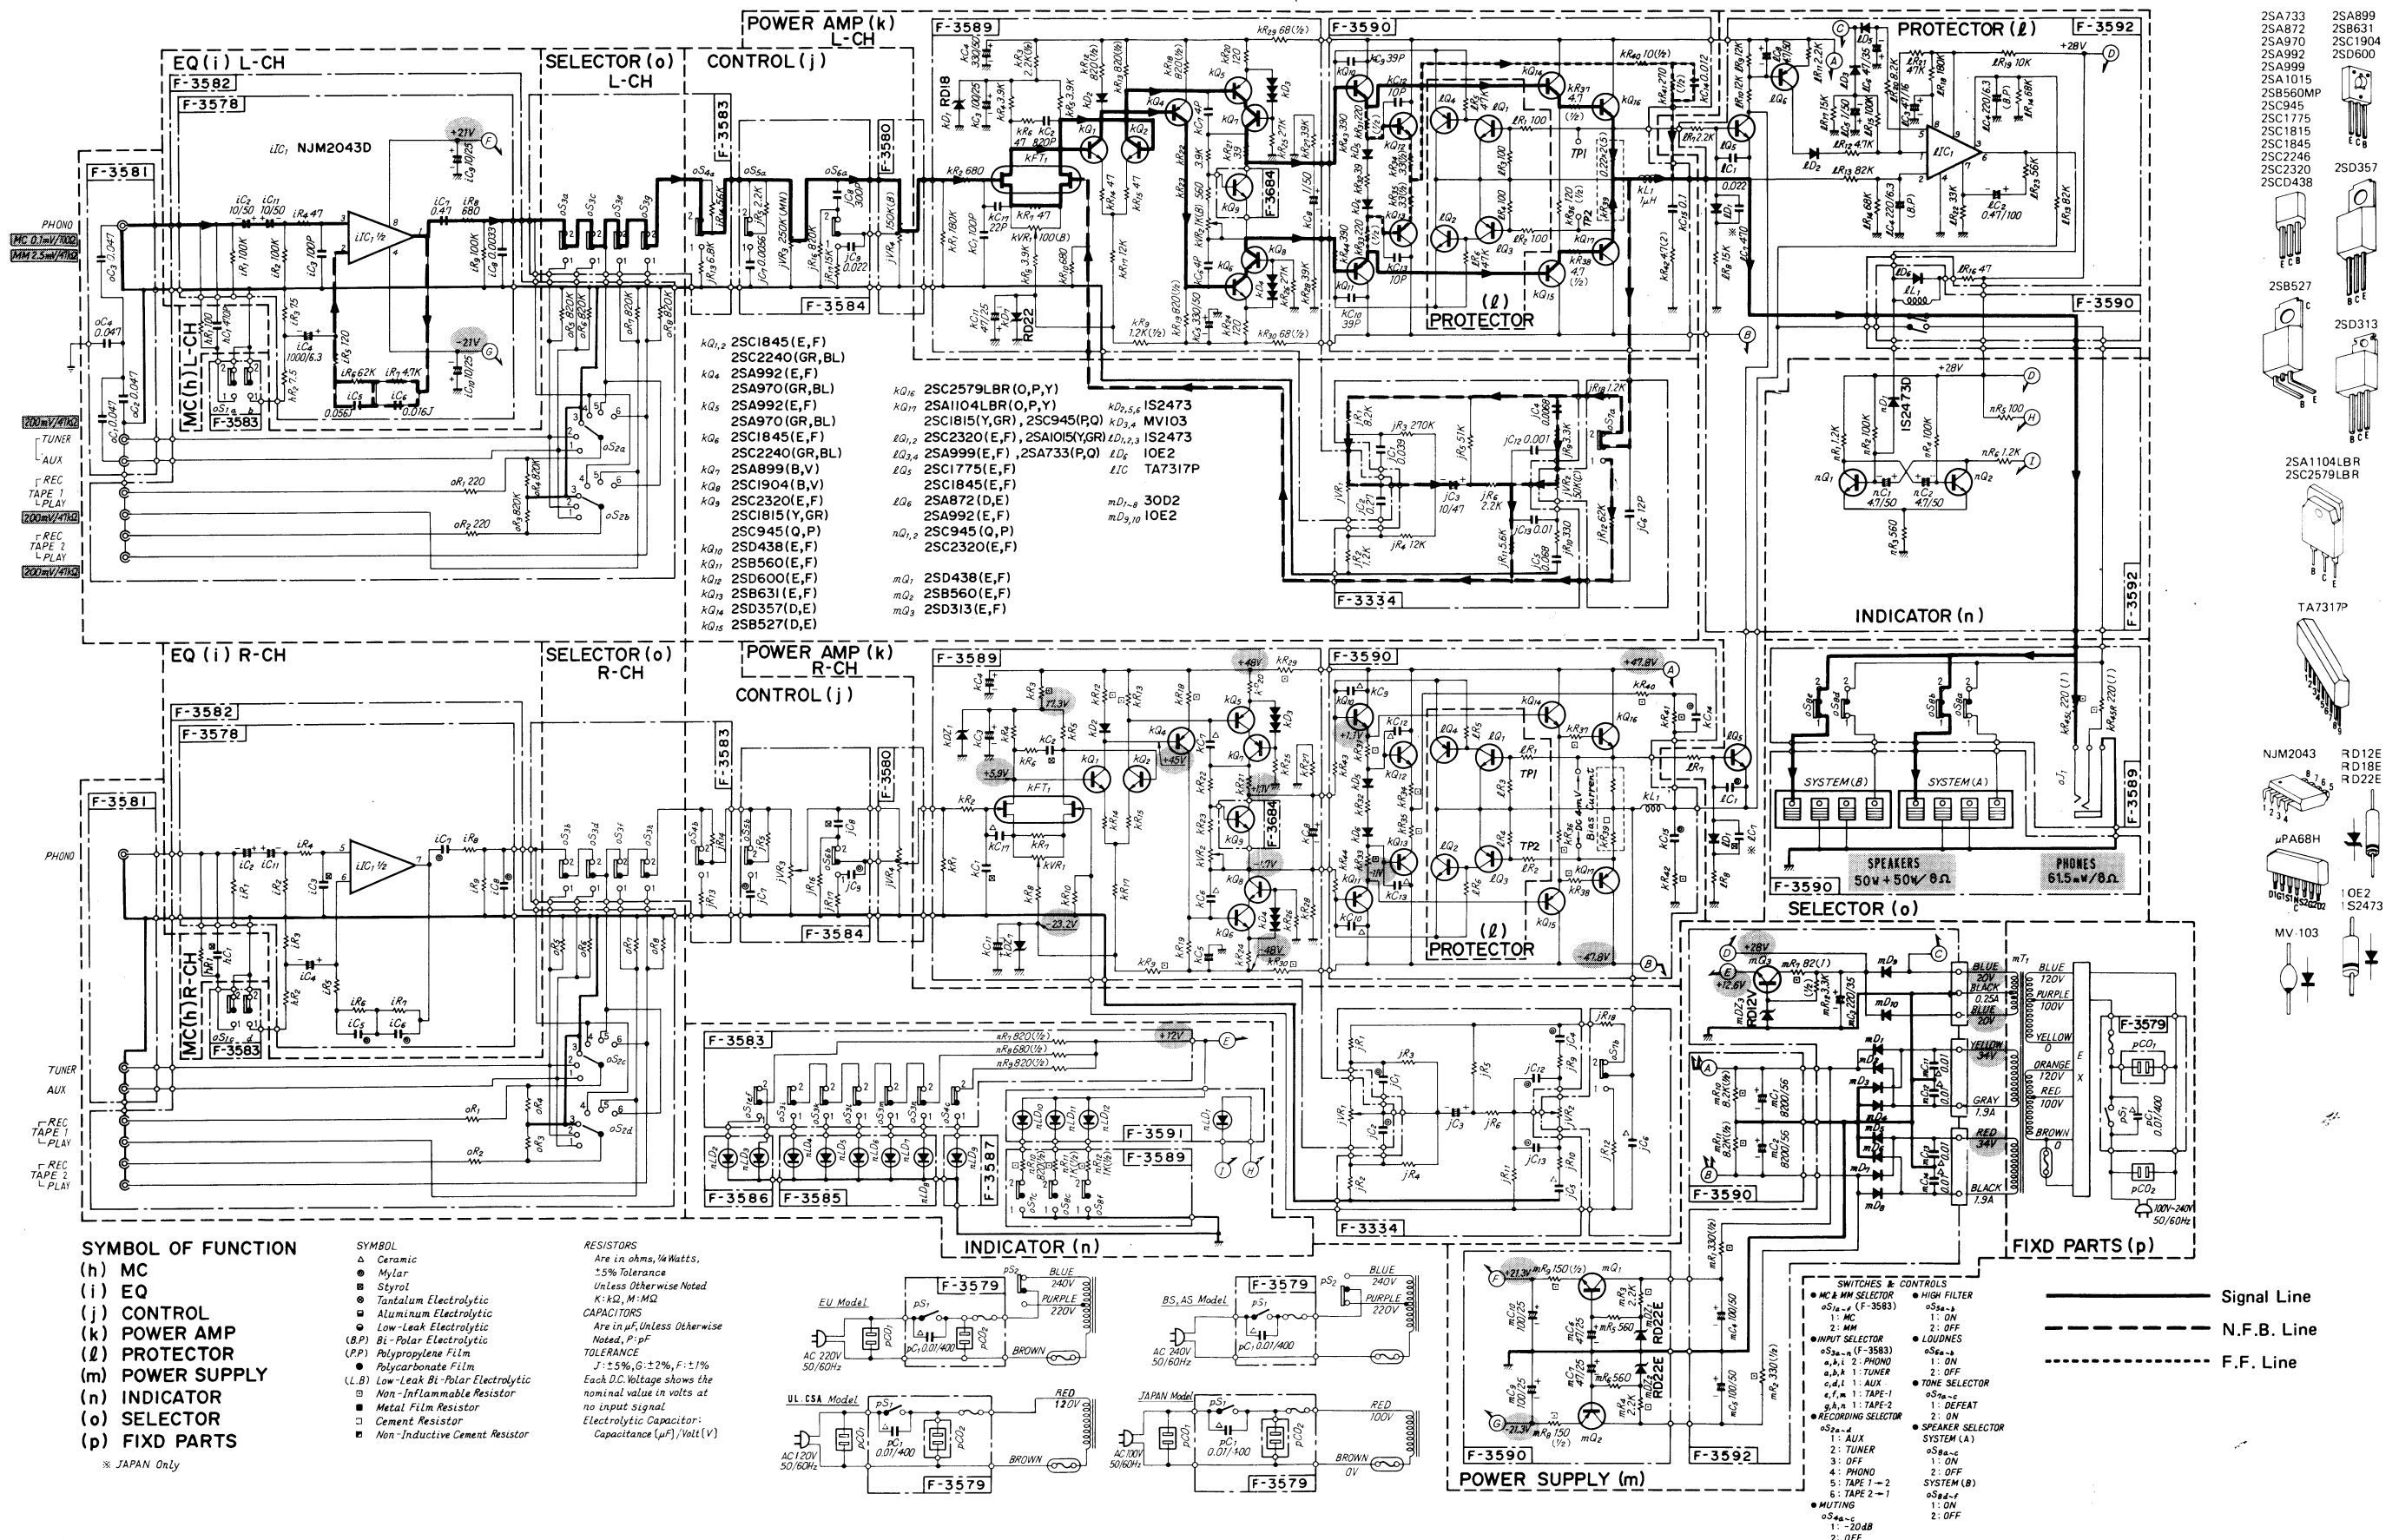

6-2. AU-D22

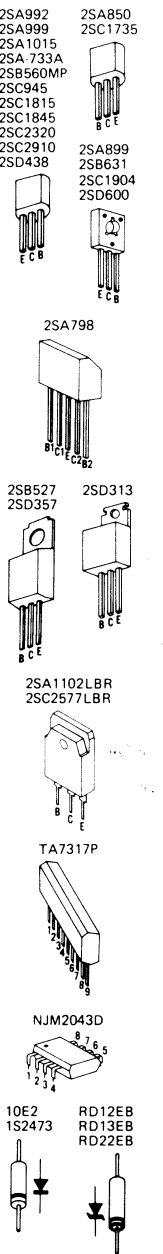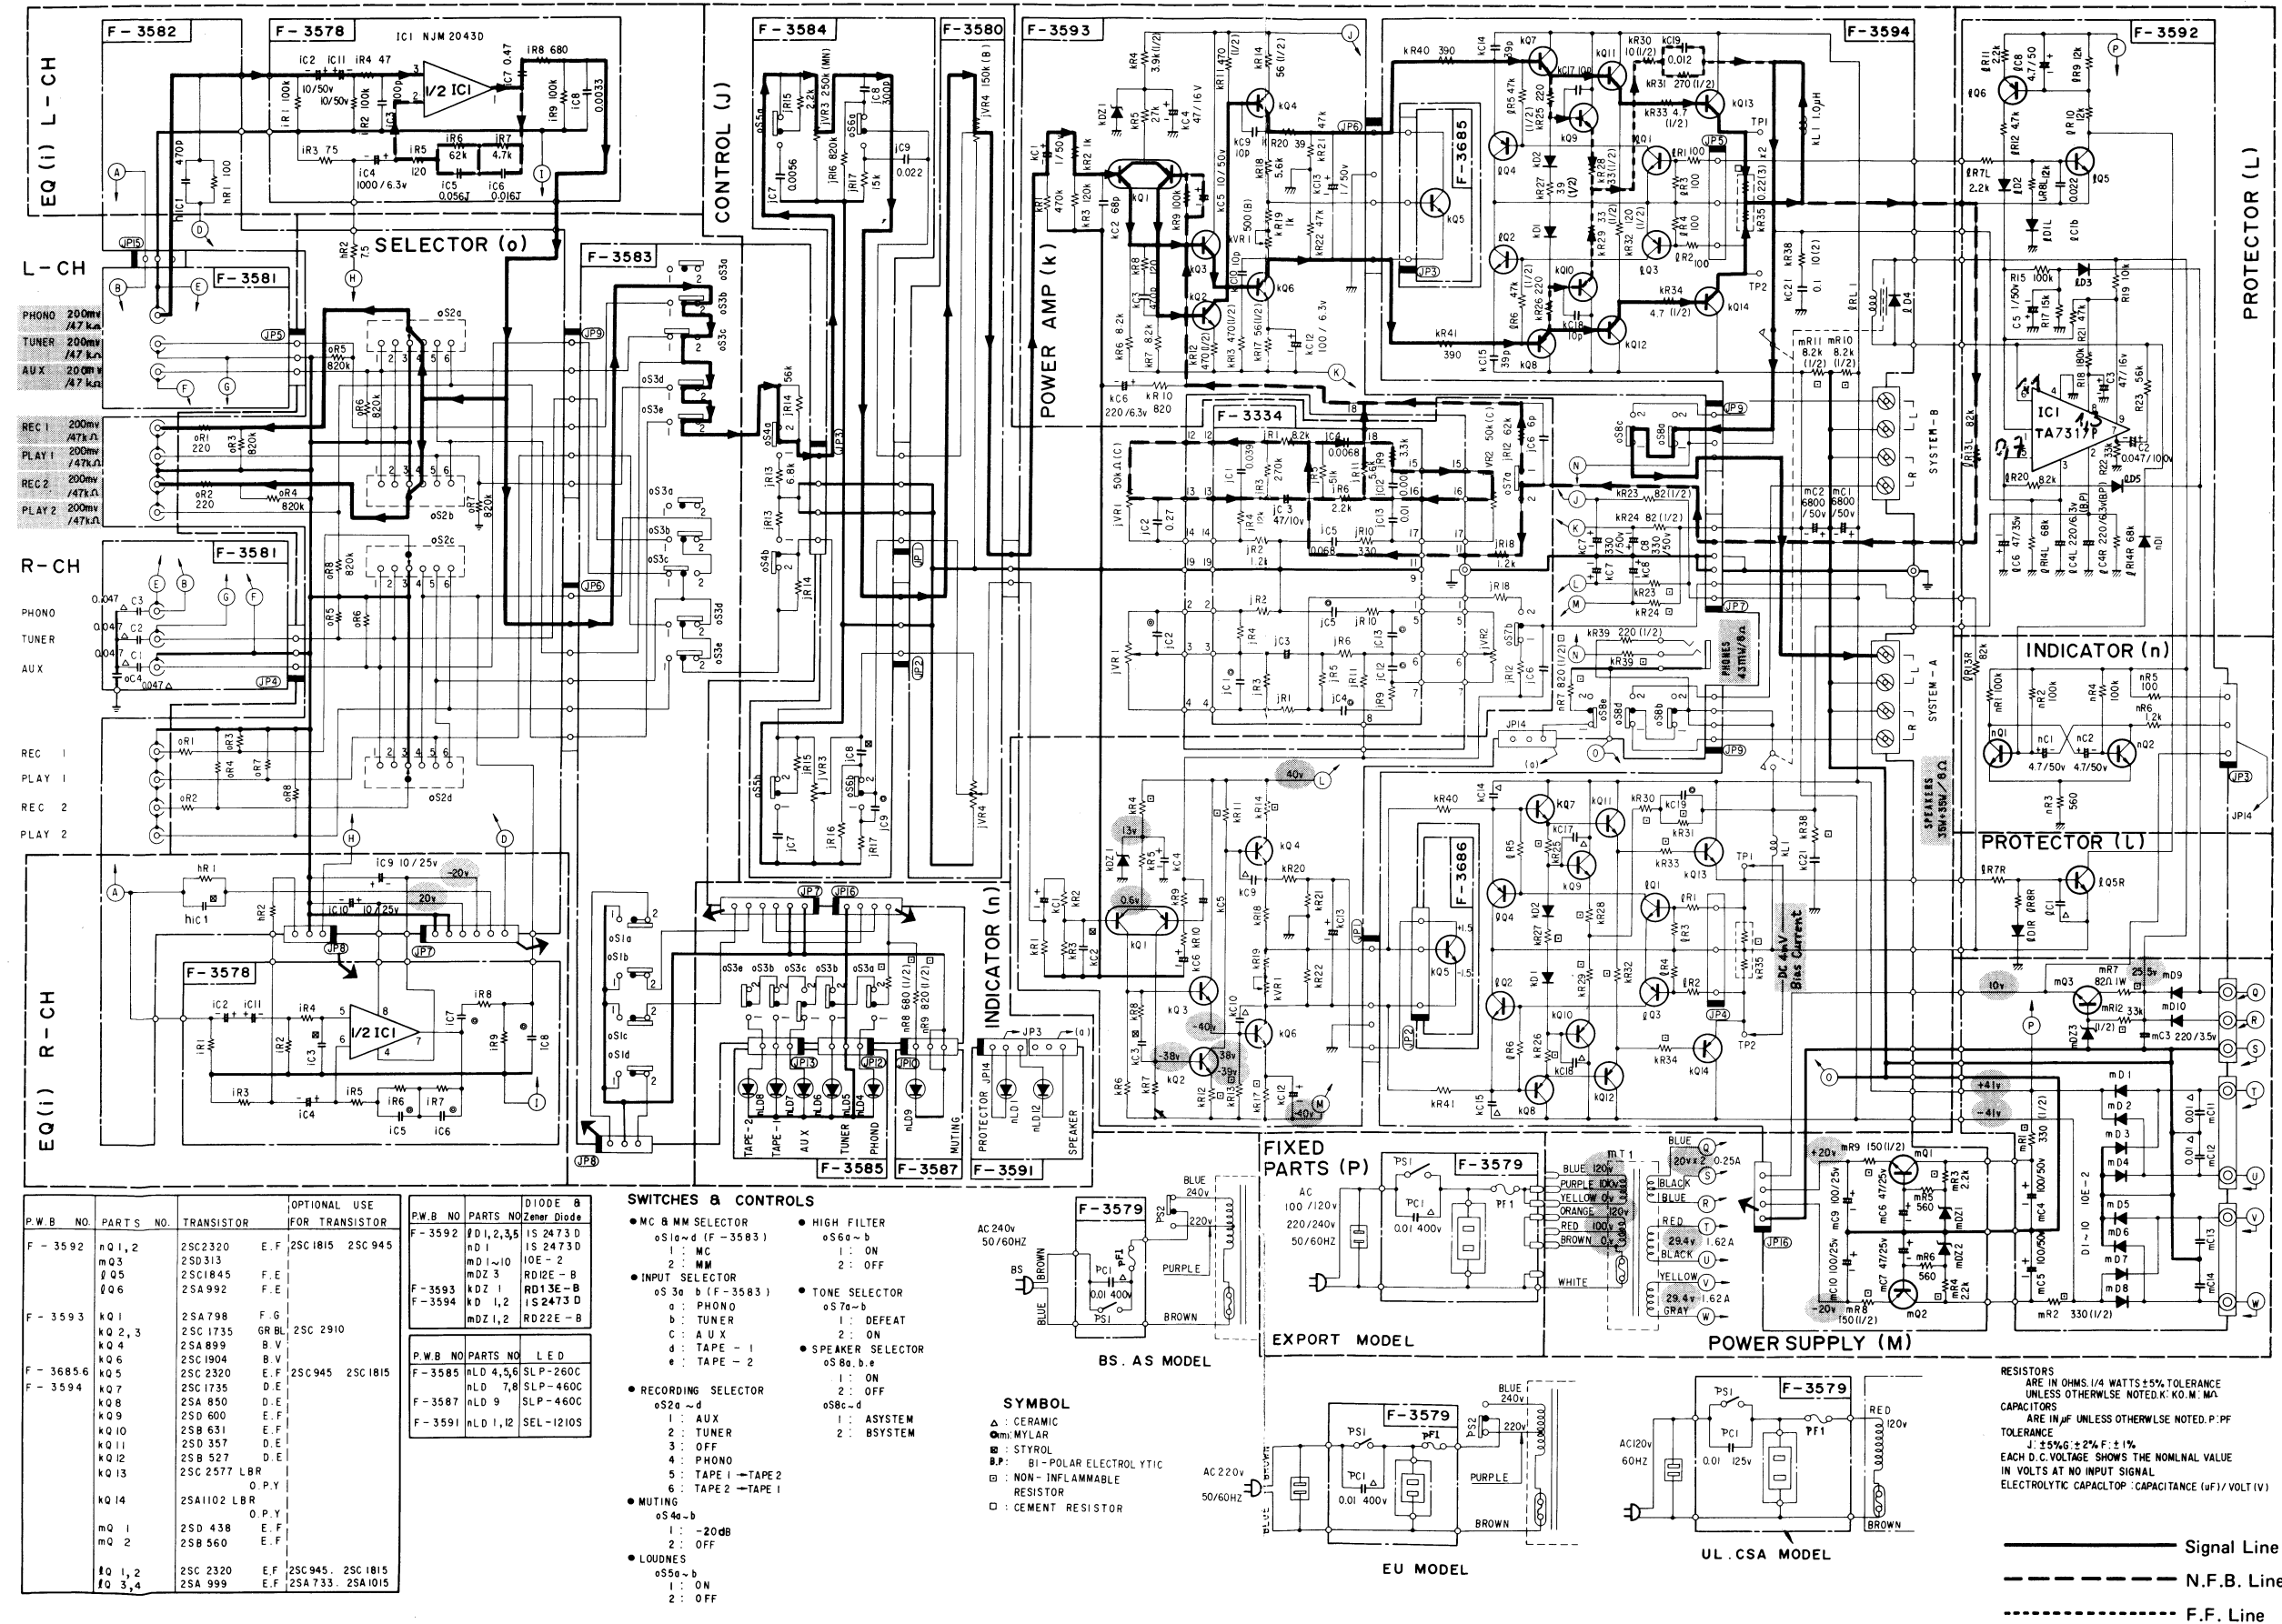


7. PACKING LIST

•AU-D33

Parts No.	Stock No.	Description
1	91167810	Vinyl Cover
2	07811900	Styrofoam Packing
3	07811100	Carton Case (Silver Model)
	07810900	Carton Case (Black Model)

•AU-D22

Parts No.	Stock No.	Description
1	91167810	Vinyl Cover
2	07811900	Styrofoam Packing
3	07811300	Carton Case (Silver Model)
	07811200	Carton Case (Black Model)

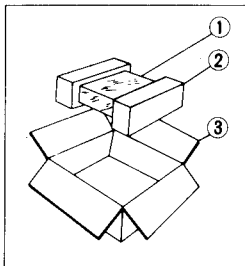

8. ACCESSORY LIST

•AU-D33

Stock No.	Description
46125300	Operating Instruction

•AU-D22

Stock No.	Description
46141700	Operating Instruction